

QUICK START



1

Battery and ON/OFF

- Open the battery door — located on the bottom of the device.
- Remove yellow tab from battery. **Note: The battery has a flat side and a round side.**
- Place battery in the door and close. **Note: Door will not close if the battery is inserted incorrectly.**

Turn **ON** by closing battery door. A working battery must be in place. Turn **OFF** by opening battery door. **Note: Battery does not need to be removed if the door is open far enough to turn off the device.**



Battery Door
ON = Closed
OFF = Open



Tip: Always carry spare batteries.

Low-battery warning: When you hear a low rumbling sound, change the battery (refer to manual).

2

Eartips and Proper Insertion



The eartip that is most comfortable and seals the ear is the best choice. **Note: Eartips are reusable. Replace 3-flange eartips every 60-90 days and foam eartips regularly.**

To properly insert: Pull ear up and out. Using a twisting motion, position the device horizontally in the ear with the switch toward the back of the ear.


Note: Feedback (whistling) may be heard while inserting the device until it is fully sealed in the ear.

When changing eartips make sure the eartip fits securely on the stem of the device.

correct



incorrect

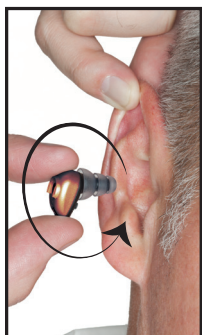

Tip: Deeply-sealed eartips reduce the "hollow" sound in your voice. If this happens, try to achieve a deeper seal. You may want to try an eartip with a long stem.

3

Operating the Switch

Normal setting — flip the switch toward the front of the device.



High setting — flip the switch toward the back of the device for more sound.



Tip: Some people can flip the switch when the device is in the ear, but it is not unusual that you will have to take it out of your ear to change the switch position.

Refer to the user manual for complete instructions and troubleshooting information.